

# REAR GRILLE OF PTAC INSTALLATION INSTRUCTIONS

## SLEEVE HARDWARE


| ITEM | DESCRIPTION                       | QTY | NOTES            |
|------|-----------------------------------|-----|------------------|
| 1    | WALL SLEEVE subassembly(optional) | 1   |                  |
| 2    | SEAL A                            | 1   | 26.4" LONG       |
| 3    | SEAL B                            | 2   | 1.6" LONG        |
| 4    | REAR GRILLE                       | 1   | MODEL A,MODEL B  |
| 5    | INSULATION STRIP                  | 2   |                  |
| 6    | SCREW ST3.9*14                    | 2   | Only for MODEL A |

NOTE:REAR GRILLE has MODEL A and MODEL B for choice.




## INSTALLING THE REAR GRILLE

- Attach SEAL A and SEAL B to the SLEEVE in the positions shown below.

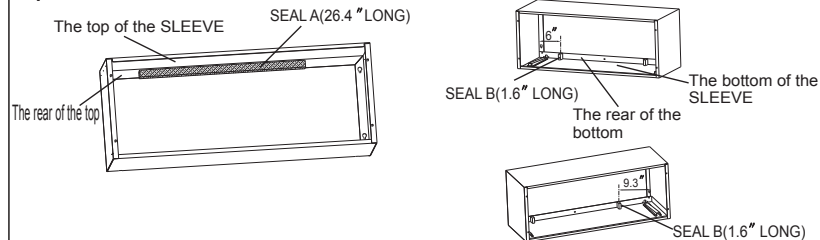


- Attach two insulation strips to the rear grille in the positions shown below.

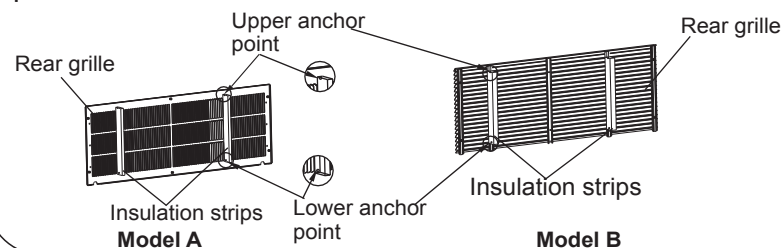


## INSTALLING THE REAR GRILLE(CONTINUED)


- Attach the rear grille to the sleeve by sliding the holes in the rear grille over the protruding screws on the sleeve as shown below.

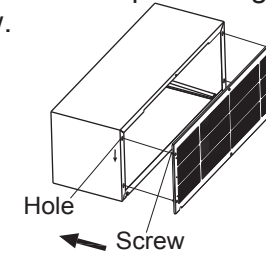


- Once the holes in the rear grille clear the head of the screws in the sleeve, pull down on the rear grille so that the screws slide into the "U" holes as shown below.

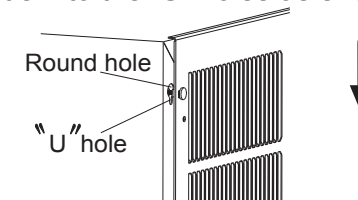

- The rear grille is properly installed when the screws in the sleeve slide into the bottom of the "U" holes on the rear grille.

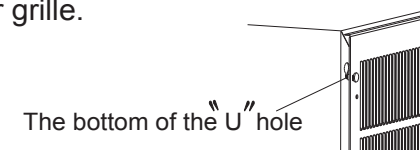

- For MODEL A two additional screws must be screwed through the rear grille and into the sleeve as shown below. (NOTE: not necessary for Model B)

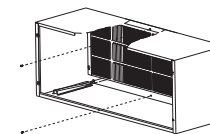

CWO34I-PTAC(GS)  
2020001A8141  
20140820